


"Volume - Tone - Volume - Tone"
plus 3-way toggle switch wiring
for Gibson Les Paul, SG, Firebird,
ES-175 & ES-335™ ; PRS McCarty™, and
similar two-pickup four-knob instruments

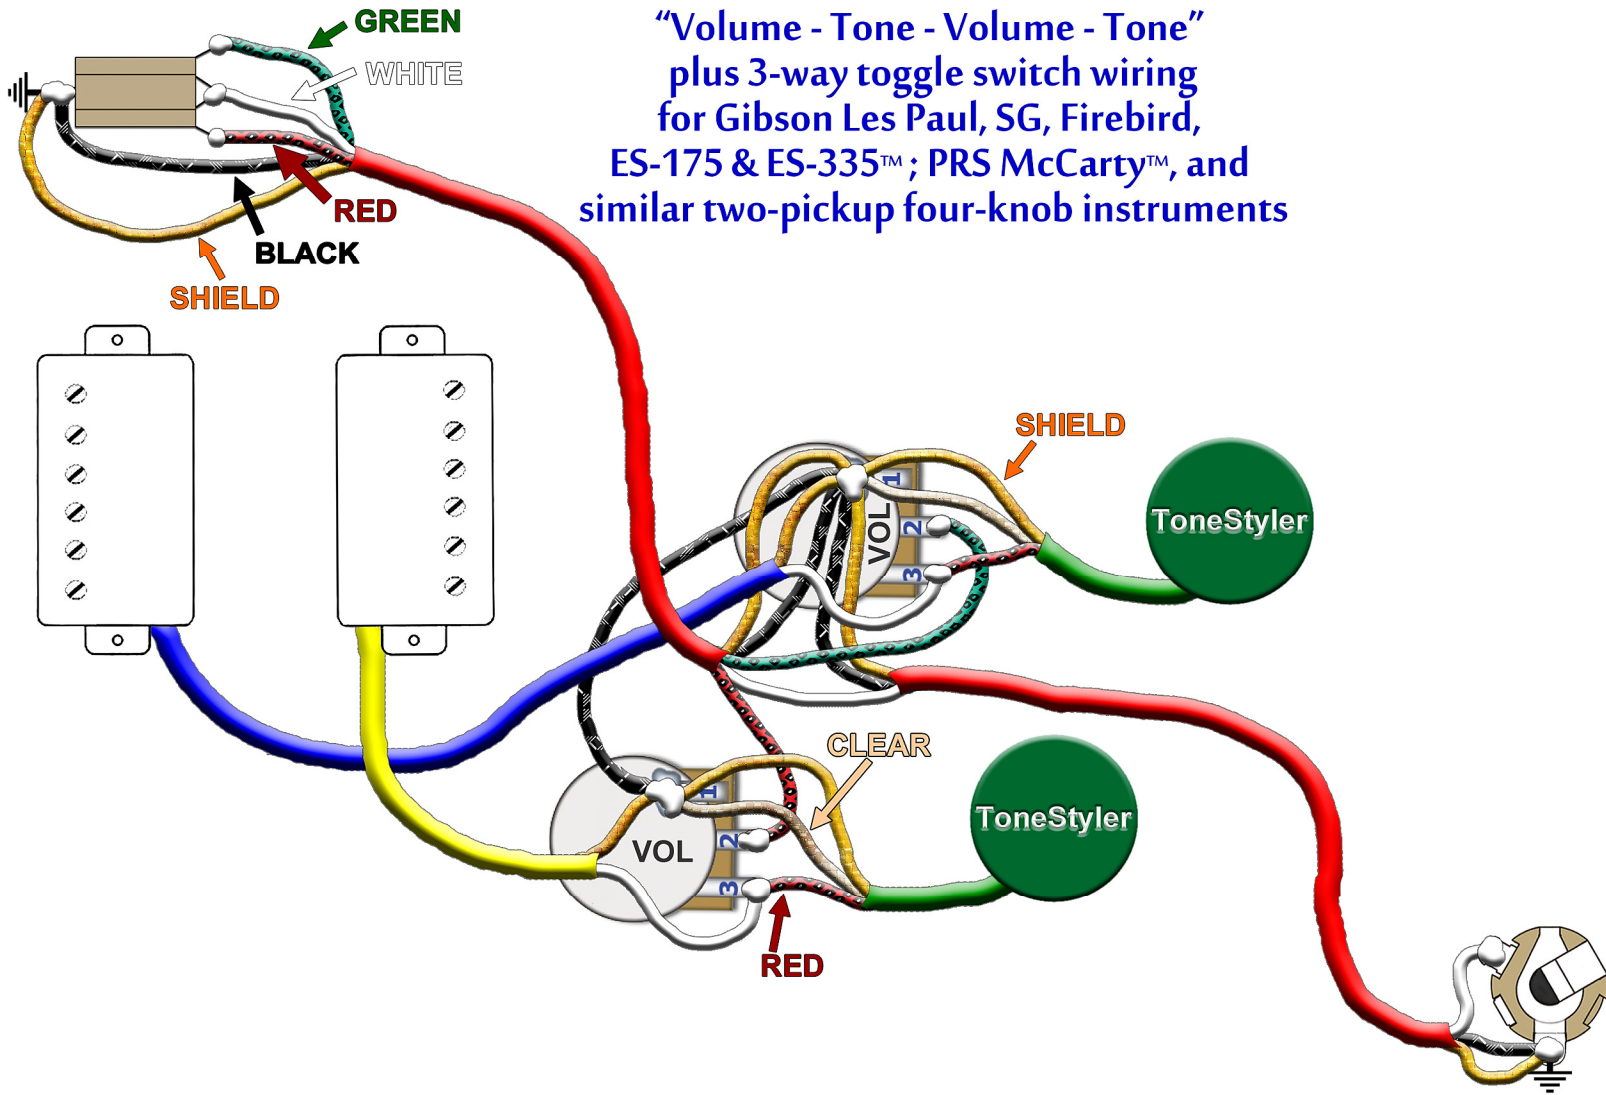



“Volume - Tone - Volume - Tone”
plus 3-way toggle switch wiring
for Gibson Les Paul, SG, Firebird,
ES-175 & ES-335™ ; PRS McCarty™, and
similar two-pickup four-knob instruments

