


A single-cable ToneStyler replaces the standard tone pot, as shown. The ToneStyler operates as a master tone selector in all pickup selector positions.

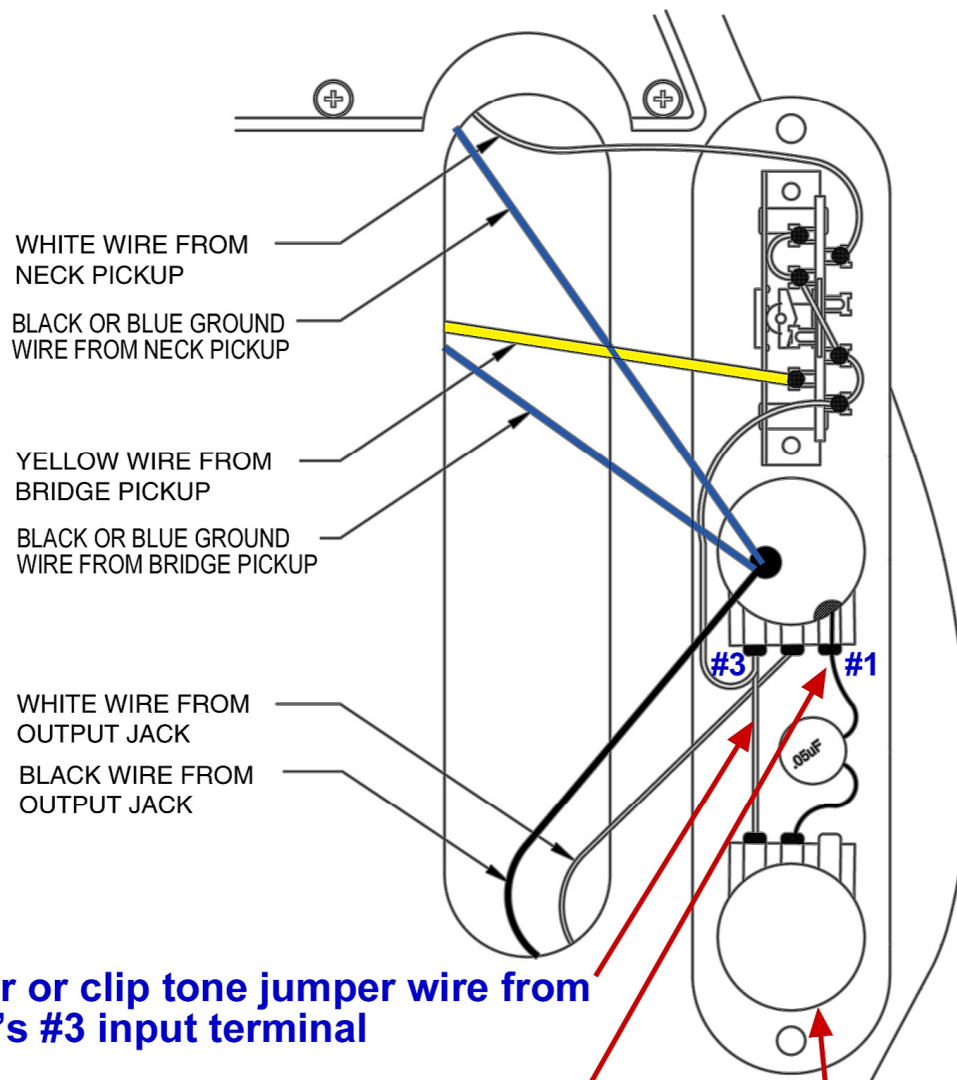


1) De-solder or clip tone jumper wire from volume pot's #3 input terminal

2) De-solder or clip tone capacitor lead from volume pot's #1 ground terminal or metal case

3) Remove tone knob & hex nut, and remove tone pot & tone cap from mounting plate; replace with ToneStyler

(over)

A single-cable ToneStyler replaces the standard tone pot, as shown. The ToneStyler operates as a master tone selector in all pickup selector positions.

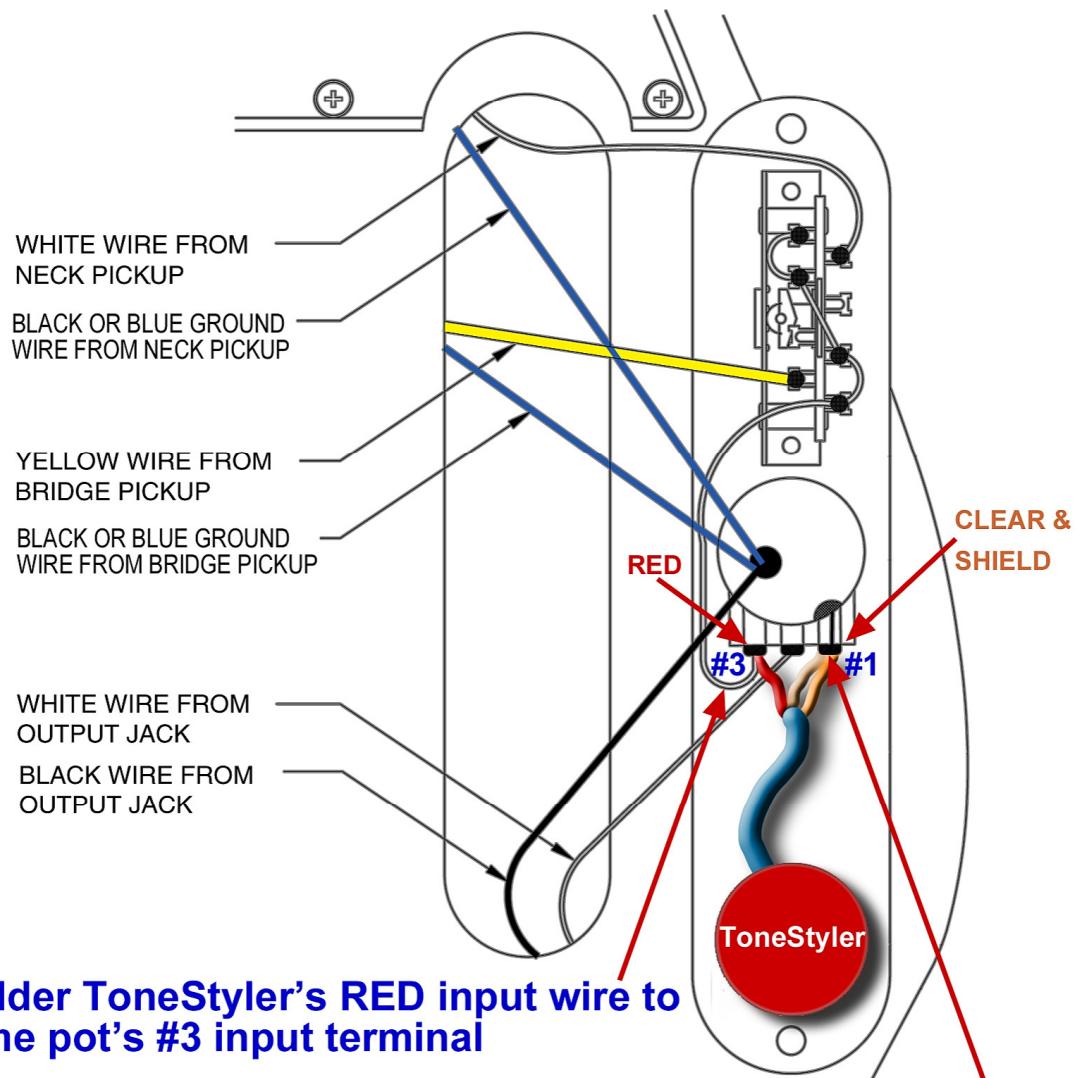

4) Solder ToneStyler's RED input wire to volume pot's #3 input terminal

5) Solder ToneStyler's CLEAR ground wire & stranded copper shield wire to volume pot's #1 ground terminal or metal case